



## 8.20 Exploded View and Kit for Model's 2034 , 2037 & 2044

REPAIR KIT 2037K-01

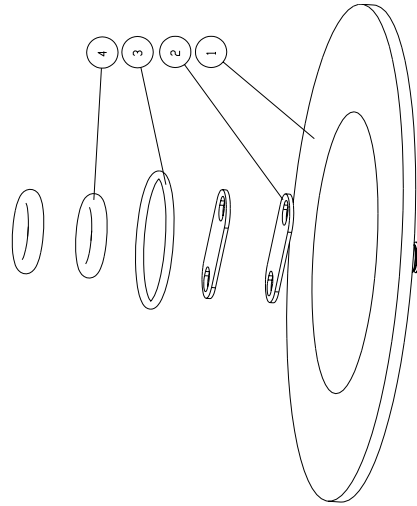

1	61-3059	1	DIAPHRAGM MOLD
2	61-3706	2	INTAKE VALVE
3	66-0166	1	O-RING #021, FLUOROELASTOMER
4	66-0167	2	O-RING 10.5 x 3.0 VITON

NOTE:  
ALL HEADSCREWS NEED TO BE  
TIGHTEN WITH TORQUE SPECS  
13.00 - 13.50 INCH PER POUND

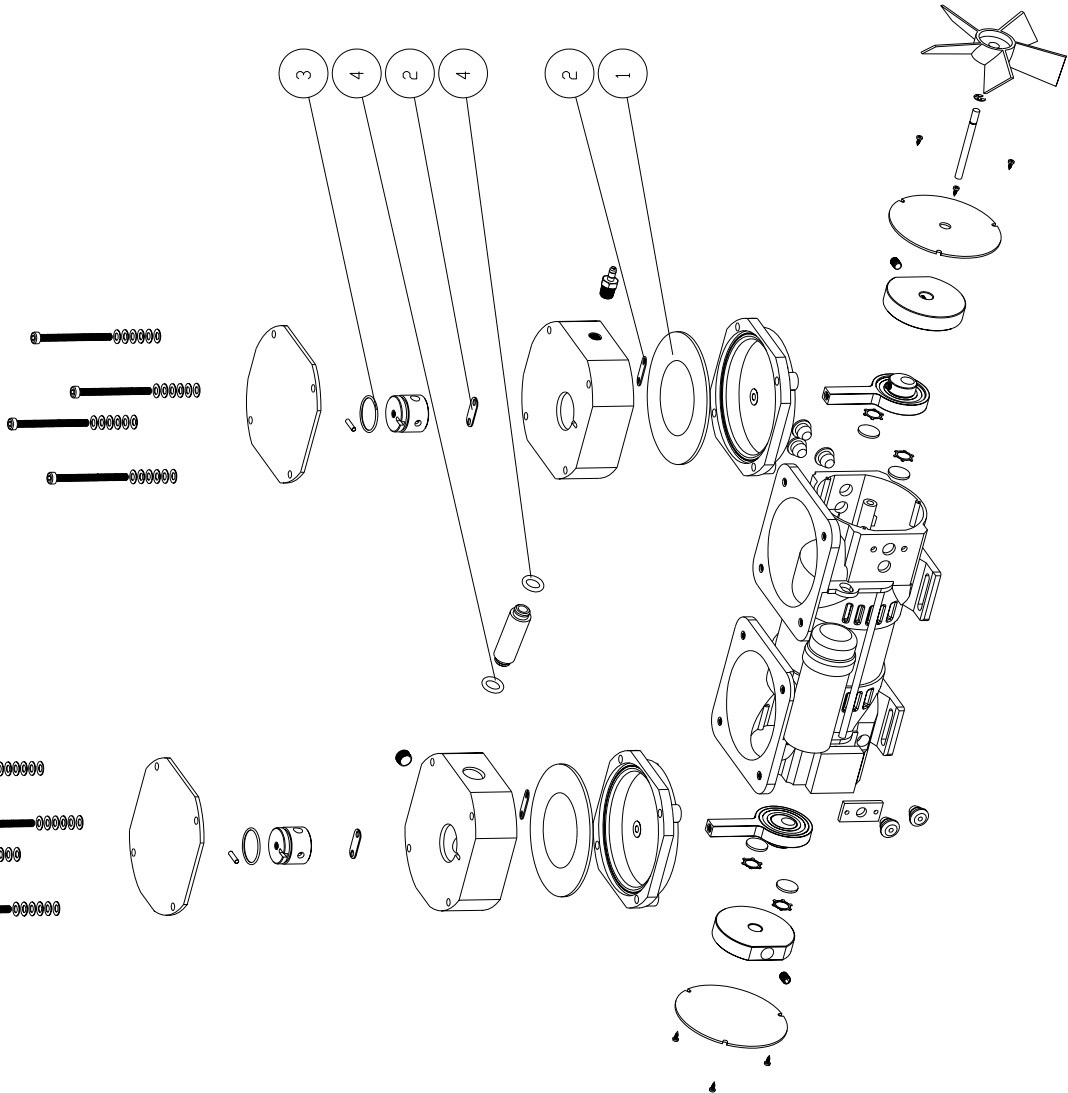

This Kit is a one Head Service Kit